

# USER MANUAL


# HYBRID SOLAR INVERTER/CHARGER



# Table Of Contents

<b>PRODUCT OVERVIEW .....</b>	<b>1</b>
<b>INSTALLATION .....</b>	<b>2</b>
Unpacking and Inspection .....	2
Preparation .....	2
Mounting the Unit .....	2
Battery Connection .....	3
AC Input/Output Connection .....	4
PV Connection .....	6
Final Assembly .....	7
<b>OPERATION .....</b>	<b>8</b>
Power ON/OFF .....	8
Operation and Display Panel .....	8
LCD Setting .....	9
<b>BATTERY EQUALIZATION .....</b>	<b>16</b>
<b>SETTING FOR LITHIUM BATTERY .....</b>	<b>18</b>
Fault Reference Code .....	23
Warning Indicator .....	24
<b>SPECIFICATIONS .....</b>	<b>25</b>
Table 1 Line Mode Specifications .....	25
Table 2 Inverter Mode Specifications .....	26
Table 3 Charge Mode Specifications .....	27
Table 4 General Specifications .....	27
<b>TROUBLE SHOOTING .....</b>	<b>28</b>

# PRODUCT OVERVIEW

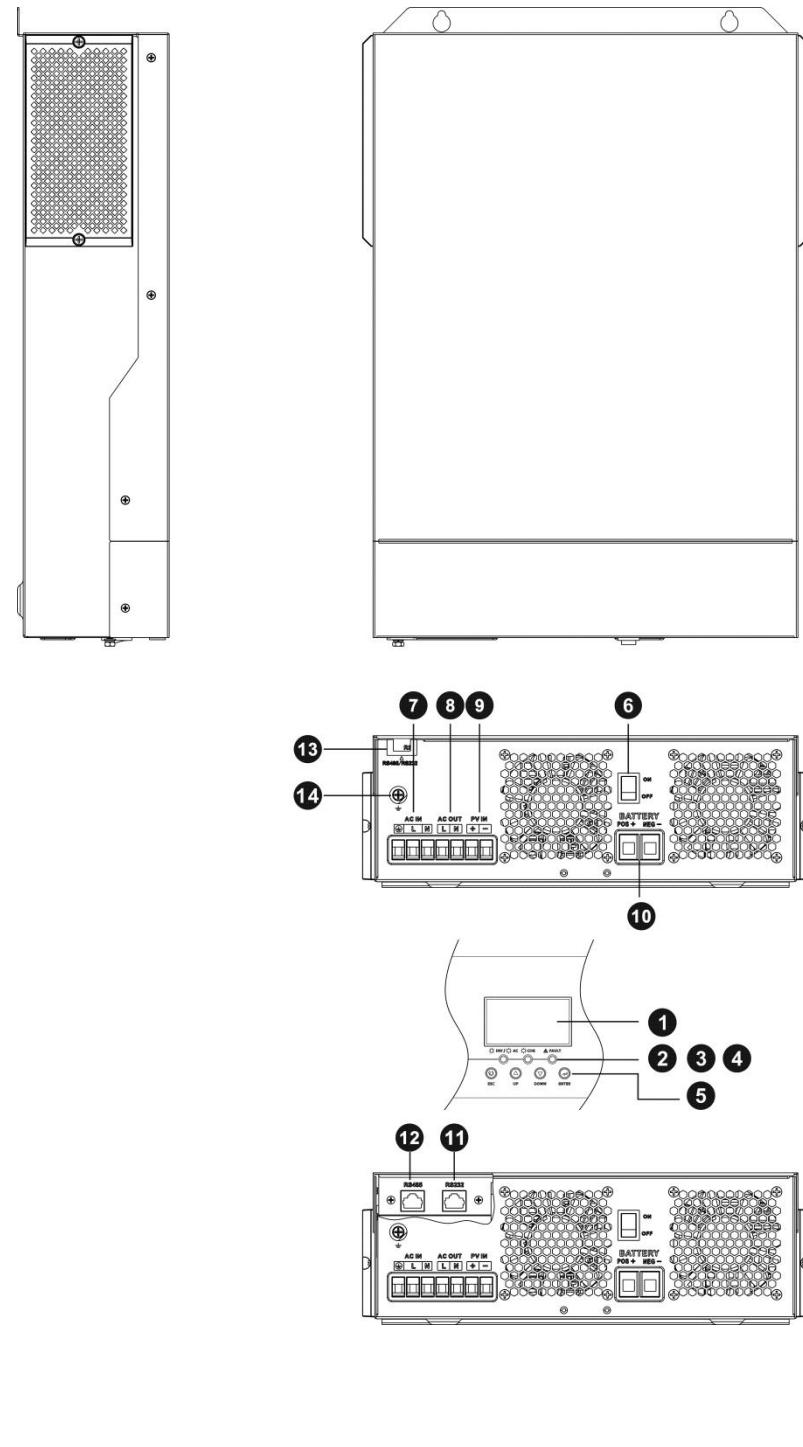

1. LCD display
2. Status indicator
3. Charging indicator
4. Fault indicator
5. Function buttons
6. Power on/off switch
7. AC input
8. AC output
9. PV input
10. Battery input
11. RS232 communication port
12. RS485 communication port
13. Wire outlet hole
14. Grounding

# INSTALLATION


## Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

1. The unit x 1
2. User manual x 1

## Preparation


Before connecting all wirings, please take off bottom cover by removing two screws as shown below.

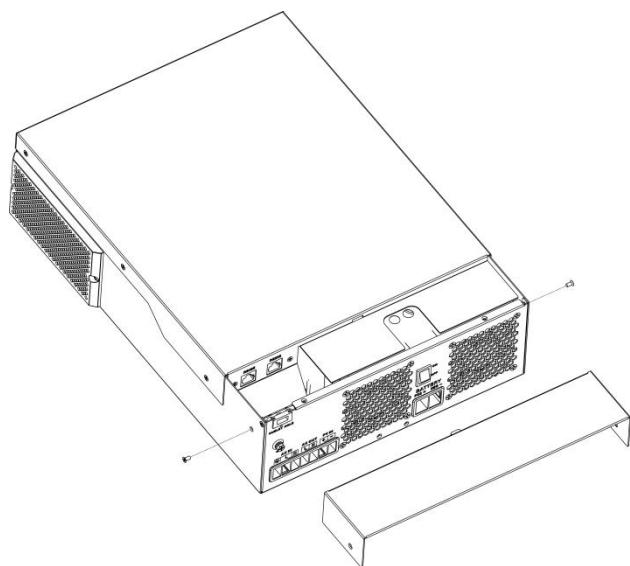

## Mounting the Unit


Consider the following points before selecting where to install:

1. Do not mount the inverter on flammable construction materials.
2. Mount on a solid surface
3. Install this inverter at eye level in order to allow the LCD display to be read at all times.
4. The ambient temperature should be between 0°C and 55°C to ensure optimal operation.
5. The recommended installation position is to be adhered to the wall vertically.
6. Be sure to keep other objects and surfaces as shown in the right diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

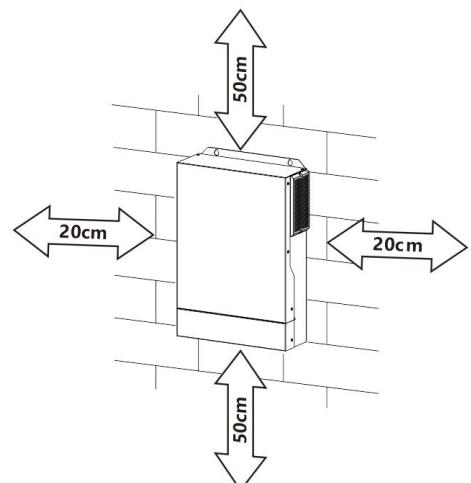

**SUITABLE FOR MOUNTING ON CONCRETE OR  
OTHER NON-COMBUSTIBLE SURFACE ONLY.**

Install the unit by screwing three screws. It's recommended to use M4 or M5 screws.

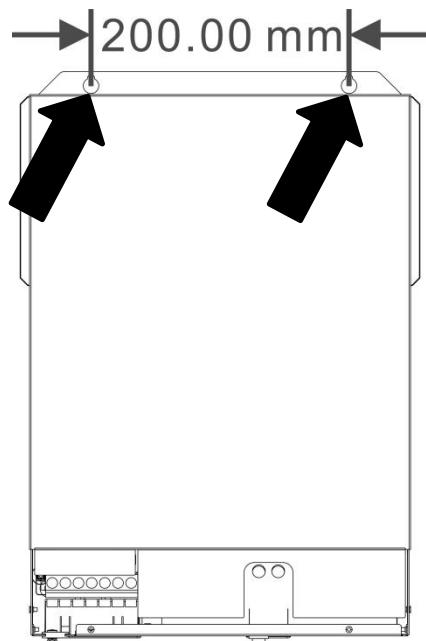


## Battery Connection

**CAUTION:** For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to have over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

### Stripping Length:

**WARNING!** All wiring must be performed by a qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable , stripping length(L2) and tinning length(L1) as below.

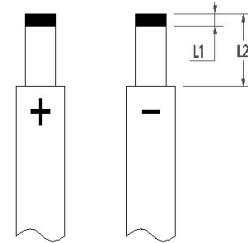


### Recommended battery cable , stripping length (L2) and tinning length(L1):

Model	Maximum Amperage	Battery capacity	Wire Size	Cable mm <sup>2</sup>	L1 (mm)	L 2 (mm)	Torque Value
1500W-24	70A	100AH	6AWG	13.3	3	18	2~3 Nm
2500W-24	100A	100AH	4AWG	21.15	3	18	2~3 Nm
Other Models	137A	100AH	2AWG	38	3	18	2~3 Nm

Please follow below steps to implement battery connection:

1. Remove insulation sleeve 18 mm for positive and negative cables based on recommended stripping length.
2. Connect all battery packs as units requires. It's suggested to use recommended battery capacity.
3. Insert battery cable flatly into battery connector of inverter and make sure the bolts are tightened with torque of 2-3 Nm. Make sure polarity at both the battery and the inverter/charge is correctly connected and battery cables are tightly screwed to the battery connector.

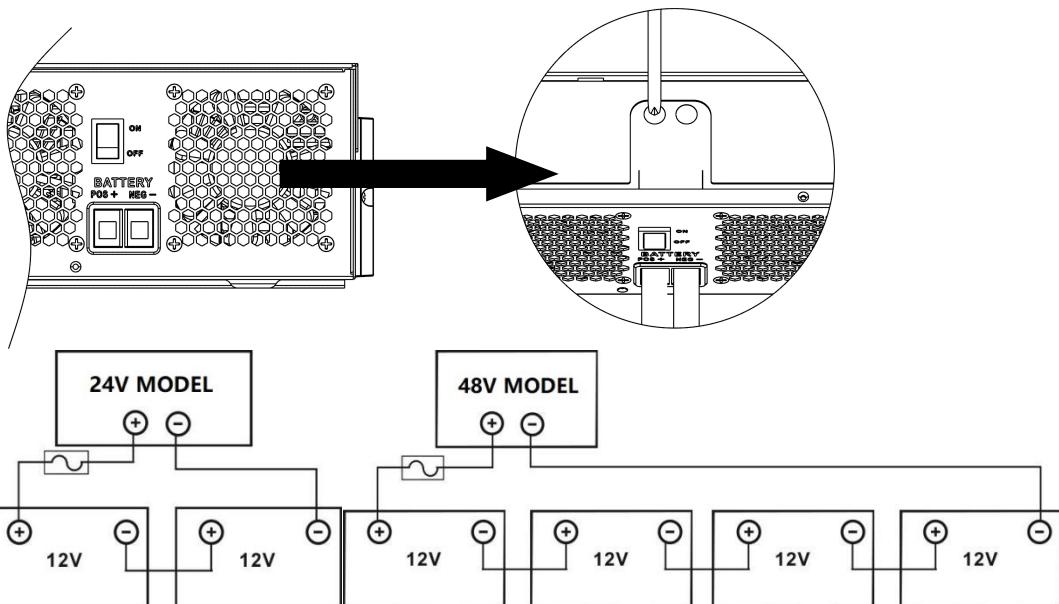

### WARNING: Shock Hazard

Installation must be performed with care due to high battery voltage in series.



**CAUTION!!** Do not place anything between the flat part of the inverter terminal Otherwise, overheating may occur.

**CAUTION!!** Do not apply anti-oxidant substance on the terminals before terminals are connected tightly.

**CAUTION!!** Before making the final DC connection or closing DC breaker/disconnector, be sure positive (+) must be connected to positive (+) and negative (-) must be connected to negative (-).

## AC Input/Output Connection

**CAUTION!!** Before connecting to AC input power source, please install a **separate** AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of AC breaker is 50A. **CAUTION!!** There are two terminal blocks with "IN" and "OUT" markings. Please do NOT mis-connect input and output connectors.

**WARNING!** All wiring must be performed by a qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

### Suggested cable requirement for AC wires

Model	Gauge	Torque Value
1.5KVA	12AWG	1.4~ 1.6Nm
2.5KVA/3.5KVA	10AWG	1.4~ 1.6Nm
5.5KVA/6.2KVA	8 AWG	1.4~ 1.6Nm

Please follow below steps to implement AC input/output connection:


1. Before making AC input/output connection, be sure to open DC protector or disconnector first.
2. Remove insulation sleeve 10mm for six conductors. And shorten phase L and neutral conductor N 3 mm.
3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor (⏚) first.



**Ground (yellow-green)**

**L→LINE (brown or black)**

**N→Neutral (blue)**

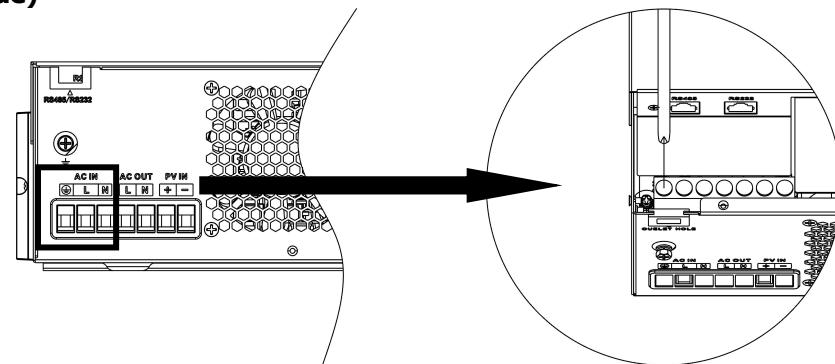

**WARNING:**

Be sure that AC power source is disconnected before attempting to hardwire it to the unit.


4. Then, insert AC output wires according to polarities indicated on terminal block and tighten terminal screws. Be sure to connect PE protective conductor (⏚) first.



**Ground (yellow-green)**

**L→LINE (brown or black)**

**N→Neutral (blue)**

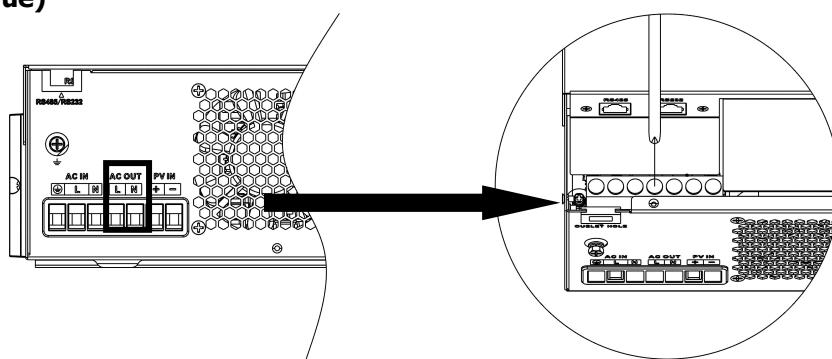

5. Make sure the wires are securely connected.

**CAUTION:** Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/charger will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

## PV Connection

**CAUTION:** Before connecting to PV modules, please install separately a DC circuit breaker between inverter and PV modules.

**WARNING!** All wiring must be performed by a qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

Model	Typical Amperage	Cable Size	Torque
1.5KVA	15A	12 AWG	1.4~1.6 Nm
2.5KVA	15A	12 AWG	1.4~1.6 Nm
3.5KVA	15A	12 AWG	1.4~1.6 Nm
5.5KVA	18A	12 AWG	1.4~1.6 Nm
6.2KVA	27A	12 AWG	1.4~1.6 Nm

### PV Module Selection:

When selecting proper PV modules, please be sure to consider below parameters:

1. Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
2. Open circuit Voltage (Voc) of PV modules should be higher than min. battery voltage.

Solar Charging Mode	1.5KVA	2.5KVA	3.5KVA	5.5KVA	6.2KVA
<b>INVERTER MODEL</b>	1.5KVA	2.5KVA	3.5KVA	5.5KVA	6.2KVA
<b>Max. PV Array Open Circuit Voltage</b>	500DC				
<b>PV Array MPPT Voltage Range</b>	60VDC~500VDC				
<b>Max. PV INPUT CURRENT</b>	15A	15A	15A	18A	27A



Take the 450Wp and 550Wp PV module as an example. After considering above two parameters, the recommended module configurations are listed in the table below.

Solar Panel Spec. (reference) - 450Wp - Vmp: 34.67Vdc - Imp: 13.82A - Voc: 41.25Vdc - Isc: 12.98A	SOLAR INPUT	Q'ty of panels	Total input power	Inverter Model
				1.5KVA-6.2KVA
- 550Wp - Vmp: 42.48Vdc - Imp: 12.95A - Voc: 50.32Vdc - Isc: 13.70A	2 pcs in serial	2 pcs	900 W	1.5KVA-6.2KVA
	3 pcs in serial	3 pcs	1,350 W	
	4 pcs in serial	4 pcs	1,800 W	
	5 pcs in serial	5 pcs	2,250 W	
	6 pcs in serial	6 pcs	2,700 W	
	7 pcs in serial	7 pcs	3,150 W	
	8 pcs in serial	8 pcs	3,600 W	
	9 pcs in serial	9 pcs	4,050 W	
	10 pcs in serial	10 pcs	4,500 W	
	11 pcs in serial	11 pcs	4,950 W	
	12 pcs in serial	12 pcs	5,400 W	
	6 pieces in serial and 2 sets in parallel	12 pcs	5,400 W	5.5KVA-6.2KVA
	7 pieces in serial and 2 sets in parallel	14 pcs	6,300 W	
Solar Panel Spec. (reference) - 550Wp - Vmp: 42.48Vdc - Imp: 12.95A - Voc: 50.32Vdc - Isc: 13.70A	SOLAR INPUT	Q'ty of panels	Total input power	Inverter Model
				1.5KVA-6.2KVA
	2 pcs in serial	2 pcs	900 W	1.5KVA-6.2KVA
	3 pcs in serial	3 pcs	1,650 W	
	4 pcs in serial	4 pcs	2,200 W	
	5 pcs in serial	5 pcs	2,750 W	
	6 pcs in serial	6 pcs	3,300 W	
	7 pcs in serial	7 pcs	3,850 W	5.5KVA-6.2KVA
	8 pcs in serial	8 pcs	4,400 W	
	9 pcs in serial	9 pcs	4,950 W	
	4 pieces in serial and 2 sets in parallel	8 pcs	4,400 W	6.2KVA
	5 pieces in serial and 2 sets in parallel	10 pcs	5,500 W	
	6 pieces in serial and 2 sets in parallel	12 pcs	6,600 W	

## PV Module Wire Connection:

Please follow below steps to implement PV module connection:


1. Remove insulation sleeve 10 mm for positive and negative conductors
2. Check correct polarity of connection cable from PV modules and PV input connectors. Then, connect positive pole (+) of connection cable to positive pole (+) of PV input connector. Connect negative pole (-) of connection cable to negative pole (-) of PV input connector.

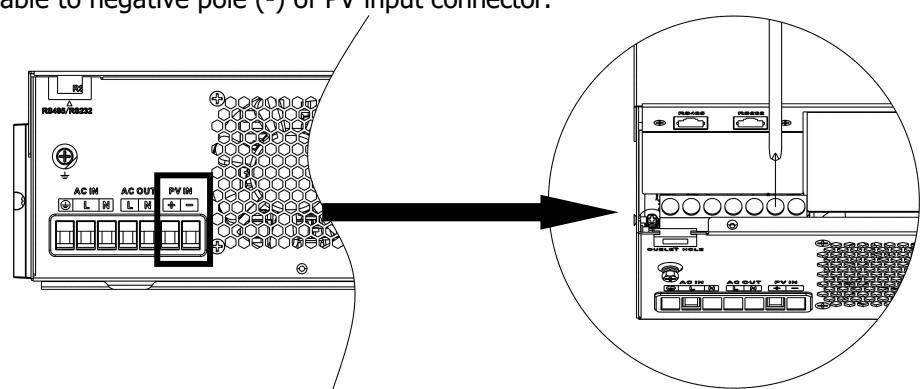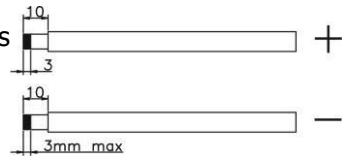

3. Make sure the wires are securely connected.


## Final Assembly

After connecting all wirings, please put bottom cover back by screwing two screws as shown below.

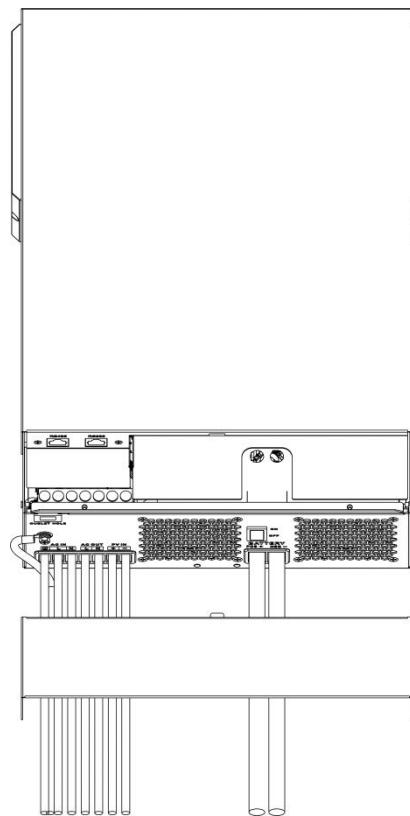

# OPERATION


## Power ON/OFF

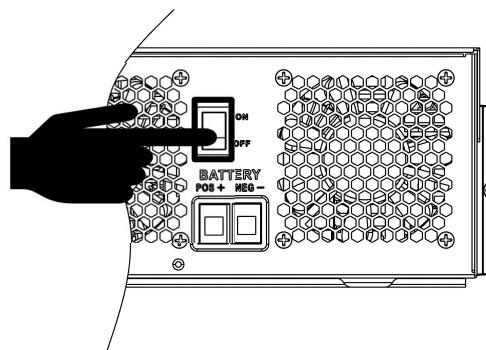

Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the button of the case) to turn on the unit.

## Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes three indicators, four function keys and a LCD display, indicating the operating status and input/output power information.

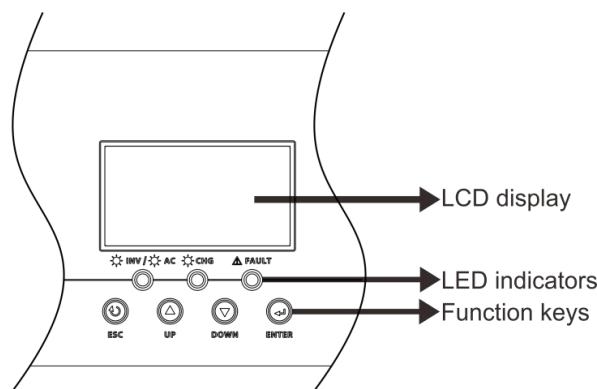

### LED Indicator

LED Indicator		Messages	
	Green	Solid On	Output is powered by utility in Line mode.
		Flashing	Output is powered by battery or PV in battery mode.
	Green	Solid On	Battery is fully charged.
		Flashing	Battery is charging.
	Red	Solid On	Fault occurs in the inverter.
		Flashing	Warning condition occurs in the inverter.

### Function Keys

Function Key	Description
ESC	To exit setting mode
UP	To go to previous selection
DOWN	To go to next selection
ENTER	To confirm the selection in setting mode or enter setting mode




## LCD Setting


After pressing and holding ENTER button for 3 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or ESC button to exit.




### Setting Programs:




Program	Description	Selectable option	
01	Output source priority: To configure load power source priority	Utility first (default) 	Utility will provide power to the loads as first priority. Solar and battery energy will provide power to the loads only when utility power is not available.
		Solar first 	Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, battery energy will supply power to the loads at the same time. Utility provides power to the loads only when any one condition happens: - Solar energy is not available - Battery voltage drops to either low-level warning voltage or the setting point in program 12.
		SBU priority 	Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, battery energy will supply power to the loads at the same time. Utility provides power to the loads only when battery voltage drops to either low-level warning voltage or the setting point in program 12.
		SUB priority 	Solar energy is charged first and then power to the loads. If solar energy is not sufficient to power all connected loads, Utility energy will supply power to the loads at the same time.

		<p>SUF priority</p> <p>01 <u>SUF</u></p>	<p>If solar energy is sufficient to all connected loads and charge battery, the solar energy could feedback to the grid</p> <p>If solar energy is not sufficient to power all connected loads, utility energy will supply power to the loads at the same time.</p>
02	Maximum charging current: To configure total charging current for solar and utility chargers. (Max. charging current = utility charging current + solar charging current)	<p>60A (default)</p> <p>02 <u>60</u><sup>A</sup></p>	<p>If selected, acceptable charging current range will be from Max. AC charging current to Max. charging current of SPEC, but it shouldn't be less than the AC charging current (program 11)</p>
03	AC input voltage range	<p>Appliances (default)</p> <p>03 <u>RPL</u></p>	<p>If selected, acceptable AC input voltage range will be within 90-280VAC.</p>
		<p>UPS</p> <p>03 <u>UPS</u></p>	<p>If selected, acceptable AC input voltage range will be within 170-280VAC.</p>
		<p>Generator</p> <p>03 <u>GNE</u></p>	<p>If selected, acceptable AC input voltage range will be within 170-280VAC and compatible with generators.</p> <p>Note: Because generators are unstable, maybe the output of inverter will be unstable too.</p>
05	Battery type	<p>AGM (default)</p> <p>05 <u>RGr</u></p>	<p>Flooded</p> <p>05 <u>FLd</u></p>
		<p>User-Defined</p> <p>05 <u>USE</u></p>	<p>If "User-Defined" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 26, 27 and 29.</p>
		<p>05 <u>LI 2</u></p>	<p>Support PYLON US2000 Protocol 3.5 Version</p>
		<p>05 <u>LI 4</u></p>	<p>Standard communication Protocol form inverter supplier</p>
		<p>Lithium battery without communication</p> <p>05 <u>LIB</u></p>	<p>If "LIB" is selected, the battery default value is fit for lithium battery without communication battery charge voltage and low DC cut-off voltage can be set up in program 26,27 and 29.</p>

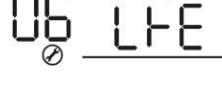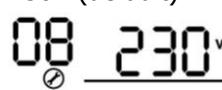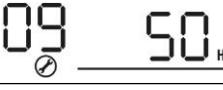06	Auto restart when overload occurs	Restart disable 	Restart enable (default) 
07	Auto restart when over temperature occurs	Restart disable 	Restart enable (default) 
08	Output voltage	220V 	230V (default) 
		240V 	
09	Output frequency	50Hz (default) 	60Hz 
10	Auto bypass When selecting "auto", if the mains power is normal, it will automatically bypass, even if the switch is off.	manual(default) 	auto 
11	Maximum utility charging current	30A (default) 	If selected, acceptable charging current range will be within 2-Max. AC charging current of SPEC.
12	Setting voltage point back to utility source when selecting "SBU priority" or "Solar first" in program 01.	<b>48V models</b> (program 5 is not LIB):46V (default) Setting range is from 44.0V to 57.2V for 48v model, but the max setting value must be less than the value of program13.	
		<b>48V models</b> (program 5 is LIB):52V (default) Setting range is from 44.0V to 57.2V for 48v model, but the max setting value must be less than the value of program13.	
		<b>24V models</b> (program 5 is not LIB):23V (default) Setting range is from 22.0V to 28.6V for 24v model, but The max setting value must be less than the value of program13.	
13	Setting voltage point back to battery mode when selecting "SBU priority" or "Solar first" in program 01.	<b>24V models</b> (program 5 is LIB):26V (default) Setting range is from 22.0V to 28.6V for 24v model, but The max setting value must be less than the value of program13.	
		<b>48V models:</b> Setting range is from 48V to full (the value of program26-0.4V), but the max setting value must be more than the value of program12. <b>24V models:</b> Setting range is from 24V to full (the value of program26-0.4V), but the max setting value must be more than the value of program12.	
		Battery fully charged (default) 	

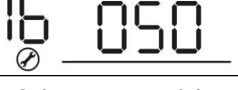16	Charger source priority: To configure charger source priority	If this inverter/charger is working in Line, Standby or Fault mode, charger source can be programmed as below:	
		Solar first 	Solar energy will charge battery as first priority. Utility will charge battery only when solar energy is not available.
		Solar and Utility (default) 	Solar energy and utility will charge battery at the same time.
		Only Solar 	Solar energy will be the only charger source no matter utility is available or not.
If this inverter/charger is working in Battery mode, only solar energy can charge battery. Solar energy will charge battery if it's available and sufficient.			
18	Buzzer mode	Mode1 	Buzzer mute
		Mode2 	The buzzer sounds when the input source changes or there is a specific warning or fault
		Mode3 	The buzzer sounds when there is a specific warning or fault
		Mode4(default) 	The buzzer sounds when there is a fault
19	Auto return to default display screen	Return to default display screen (default) 	If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage /output voltage) after no button is pressed for 1 minute.
		Stay at latest screen 	If selected, the display screen will stay at latest screen user finally switches.
20	Backlight control	Backlight on (default) 	Backlight off 
23	Overload bypass: When enabled, the unit will transfer to line mode if overload occurs in battery mode.	Bypass disable 	Bypass enable(default) 

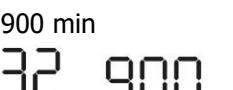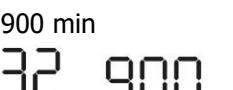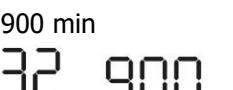25	Modbus ID Setting	Modbus ID Setting Range : 001(default)~247 						
26	Bulk charging voltage (C.V voltage)	If self-defined is selected in program 5, this program can be set up. But the setting value must be more than or equal the value of program27. Increment of each click is 0.1V. 24V models(program 5 is not Lib): Default 28.2V, setting range is from 24.0V to 31.0V , 24V models(program 5 is Lib): Default 28.2V, setting range is from 24.0V to 29.0V ,  48V models(program 5 is not Lib): Default 56.4V, setting range is from 48.0V to 62.0V, 48V models(program 5 is Lib): Default 56.4V, setting range is from 48.0V to 58.0V.						
27	Floating charging voltage	If self-defined is selected in program 5, this program can be set up. 24V models(program 5 is not Lib) default setting: 27.0V Setting range is from 24.0V to the value of program 26 24V models(program 5 is Lib) default setting: 28.2.0V Setting range is from 24.0V to the value of program 26  48V models(program 5 is not Lib) default setting: 54.0V Setting range is from 48.0V to the value of program 26 48V models(program 5 is Lib) default setting: 56.4.0V Setting range is from 48.0V to the value of program 26						
29	Low DC cut-off voltage	If self-defined is selected in program 5, this program can be set up. The setting value must be less than the value of program12. Increment of each click is 0.1V.Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected. 24V models default(program 5 is not LIB) setting: 21.0v Setting range is from 20.0V to 27.0V 24V models default(program 5 is LIB) setting: 25.0v Setting range is from 20.0V to 27.0V 48V models default(program 5 is not LIB) setting: 42.0V Setting range is from 40.0V to 54.0V 48V models default(program 5 is LIB) setting: 50.0V Setting range is from 40.0V to 54.0V						
32	Bulk charging time (C.V stage)	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 5px;">Automatically (Default): </td> <td style="padding: 5px;">If selected, inverter will judge this charging time automatically.</td> </tr> <tr> <td style="padding: 5px;">5 min </td> <td style="padding: 5px;">The setting range is from 5 min to 900 min. Increment of each click is 5 min.</td> </tr> <tr> <td style="padding: 5px;">900 min </td> <td style="padding: 5px;">If "USE" is selected in program 05, this program can be set up.</td> </tr> </table>	Automatically (Default): 	If selected, inverter will judge this charging time automatically.	5 min 	The setting range is from 5 min to 900 min. Increment of each click is 5 min.	900 min 	If "USE" is selected in program 05, this program can be set up.
Automatically (Default): 	If selected, inverter will judge this charging time automatically.							
5 min 	The setting range is from 5 min to 900 min. Increment of each click is 5 min.							
900 min 	If "USE" is selected in program 05, this program can be set up.							

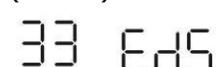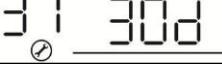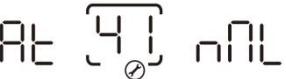33	Battery equalization	Battery equalization  If "Flooded" or "User-Defined" is selected in program 05, this program can be set up.	Battery equalization disable (default) 
34	Battery equalization voltage	24V models default(program 5 is not Lib) setting is 29.2V. Setting range is from floating voltage ~ 31V. Increment of each click is 0.1V.  24V models default(program 5 is Lib) setting is 29.2V. Setting range is from floating voltage ~ 29V. Increment of each click is 0.1V.  48V models default(program 5 is not Lib) setting is 58.4V. Setting range is from floating voltage ~ 62V. Increment of each click is 0.1V.  48V models default(program 5 is Lib) setting is 58.4V. Setting range is from floating voltage ~ 58V. Increment of each click is 0.1V.	
35	Battery equalized time	60min (default) 	Setting range is from 0 min to 900min.
36	Battery equalized timeout	120min (default) 	Setting range is from 0min to 900 min.
37	Equalization interval	30days (default) 	Setting range is from 1 to 90 days.
39	Equalization activated immediately	Enable  If equalization function is enabled in program 33, this program can be set up. If "Enable" is selected in this program, it's to activate battery equalization immediately and LCD main page will shows "Eq". If "Disable" is selected, it will cancel equalization function until next activated equalization time arrives based on program 37 setting. At this time, "Eq" will not be shown in LCD main page..	Disable (default) 
41	Automatic activation for lithium battery	AAE  AAE 	Disable automatic activation (default) When Program05 is selected "Li" as lithium battery and when the battery is not detected, the unit will activate automatically the lithium battery at a time. If you want to activate automatically the lithium battery, you must restart the unit.

42	Manual activation for lithium battery	nAt 42 NOP	Default: disable activation
		nAt 42 ACT	When Program05 is selected "Lix" as lithium battery, when the battery is not detected, If you want to activate the lithium battery at a time, you could selected it.
43	Setting SOC point back to utility source when selecting "SBU priority" or "Solar first" in program 01	43 050 <sup>BAT</sup> %	Default 50%, 5%~50% Settable, but the minimum setting value must be more than the value of program 45.
44	Setting SOC point back to battery mode when selecting "SBU priority" or "Solar first" in program 01	44 095 <sup>BAT</sup> %	Default 95%, 60%~100% Settable
45	Low DC cut-off SOC	45 020 <sup>BAT</sup> %	Default 20%, 3%~30% Settable, but the max setting value must be less than the value of program 43.
46	Maximum discharge current protection	ndC 46 OFF	Default OFF Disable current discharge current protection function
		ndC 46 500 <sup>A</sup>	Only available in Single model. When utility is available, it turns to utility model and battery discharge stops after the battery discharge current exceeded the setting value. When utility is unavailable, warning occurs and battery discharge lasts after the battery discharge current exceeded the setting value.

# BATTERY EQUALIZATION

Equalization function is added into charge controller. It reverses the buildup of negative chemical effects like stratification, a condition where acid concentration is greater at the bottom of the battery than at the top. Equalization also helps to remove sulfate crystals that might have built up on the plates. If left unchecked, this condition, called sulfation, will reduce the overall capacity of the battery. Therefore, it's recommended to equalize battery periodically.


## ● How to Apply Equalization Function

You must enable battery equalization function in monitoring LCD setting program 33 first. Then, you may apply this function in device by either one of following methods:

1. Setting equalization interval in program 37.
2. Active equalization immediately in program 39.


## ● When to Equalize

In float stage, when the setting equalization interval (battery equalization cycle) is arrived, or equalization is active immediately, the controller will start to enter Equalize stage.

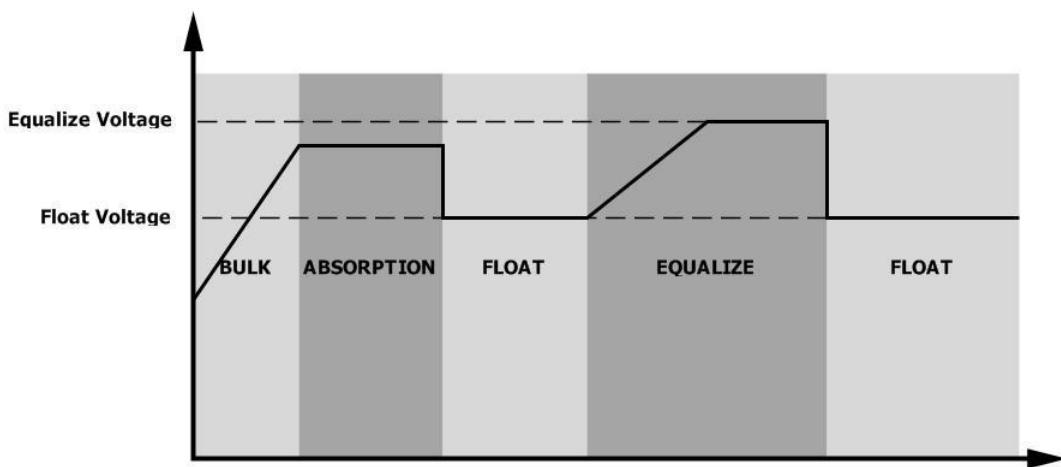


## ● Equalize charging time and timeout

In Equalize stage, the controller will supply power to charge battery as much as possible until battery voltage raises to battery equalization voltage. Then, constant-voltage regulation is applied to maintain battery voltage at the battery equalization voltage. The battery will remain in the Equalize stage until setting battery equalized time is arrived.

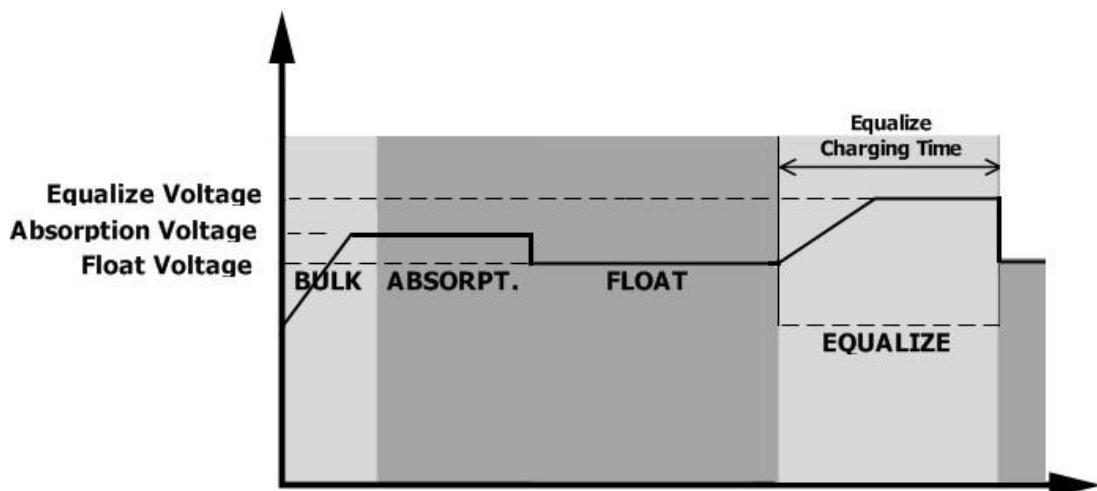

However, in Equalize stage, when battery equalized time is expired and battery voltage doesn't rise to battery equalization voltage point, the charge controller will extend the battery equalized time until battery voltage achieves battery equalization voltage. If battery voltage is still lower than battery equalization voltage when battery equalized timeout setting is over, the charge controller will stop equalization and return to float stage.

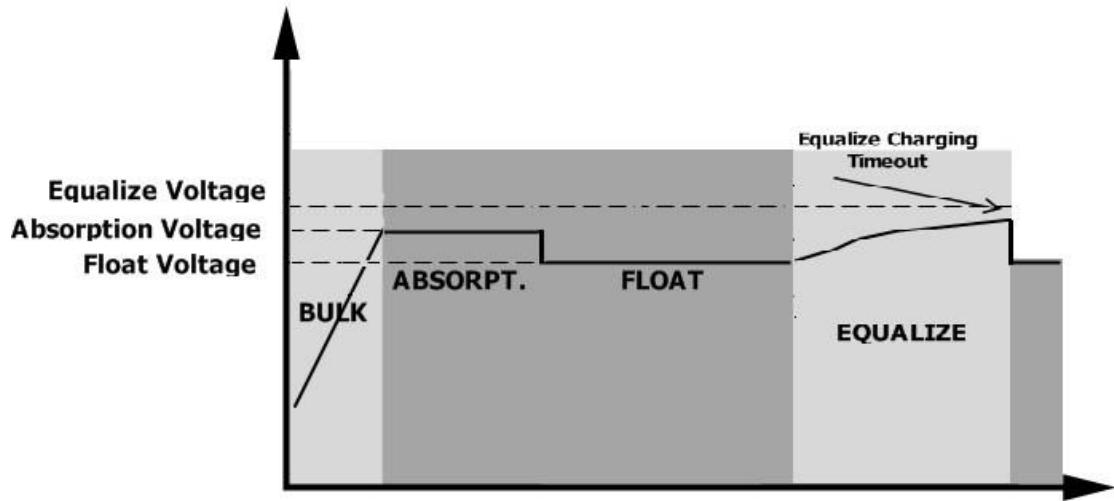

# SETTING FOR LITHIUM BATTERY

## Lithium Battery Connection

If choosing lithium battery for the inverter, you are allowed to use the lithium battery only which we have configured. There're two connectors on the lithium battery, RS485 port of BMS and power cable.

Please follow below steps to implement lithium battery connection:

- 1). Assemble battery terminal based on recommended battery cable and terminal size (same as Lead acid, see section Lead-acid Battery connection for details).
- 2). Connect the end of RS485 port of battery to BMS(RS485) communication port of inverter.

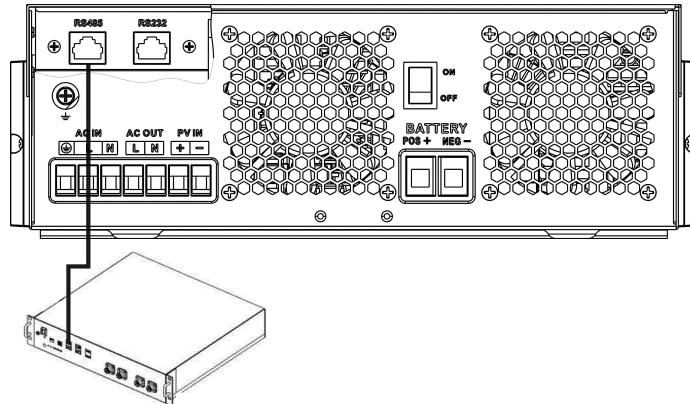


Fig 1

## Lithium battery communication and setting


If choosing lithium battery, make sure to connect the BMS communication cable between the battery and the inverter. This communication cable delivers information and signal between lithium battery and the inverter. This information is listed below:

- Re-configure charging voltage, charging current and battery discharge cut-off voltage according to the lithium battery parameters.
- Have the inverter start or stop charging according to the status of lithium battery.

## Connect the end of RS485 of battery to RS485 communication port of inverter

Make sure the lithium battery RS485 port connects to the inverter is Pin to Pin, the communication cable is inside of package and the inverter RS485 port pin assignment shown as below:

Pin number	RS485 Port
PIN1	RS485-B
PIN2	RS485-A
PIN7	RS485-A
PIN8	RS485-B

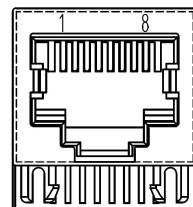

## LCD setting



After connecting, you need to finish and confirm some settings as follow:

- 1) Select program 05 as lithium battery type.
- 2) Confirm program41/42/43/44/45 setting value.

**Note:** Program 43/44/45 are only available with successful communication, they will replace the Program 12/13/29 function, at the same time, program 12/13/29 become unavailable.

## LCD Display

If communication between the inverter and battery is successful, there is some information showing on the LCD as follow:

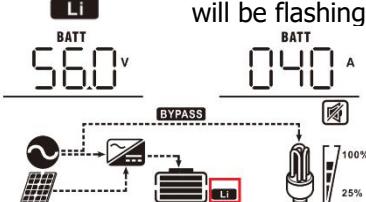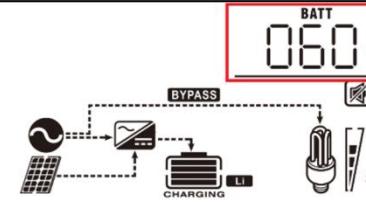Item	Description	LCD display
1	Communication successful icon	
2	Max lithium battery charging voltage	<p>Max lithium battery charging voltage is 56.0V.</p>
3	Max lithium battery charging current	<p>Max lithium battery charging current is 40A.</p>
4	Lithium battery discharging is forbidden	
5	Lithium battery charging is forbidden	
6	Lithium battery SOC(%)	 <p>Lithium battery SOC is 63AH and 60%</p>

## Setting for PYLON US2000 lithium battery

1). PYLONTECH US2000 lithium battery setting:


Dip Switch: There are 4 Dip Switches that sets different baud rate and battery group address. If switch position is turned to the "OFF" position, it means "0". If switch position is turned to the "ON" position, it means "1".

Dip 1 is "ON" to represent the baud rate 9600.

Dip 2, 3 and 4 are reserved for battery group address.

Dip switch 2, 3 and 4 on master battery (first battery) are to set up or change the group address.


**NOTE:** "1" is upper position and "0" is bottom position.

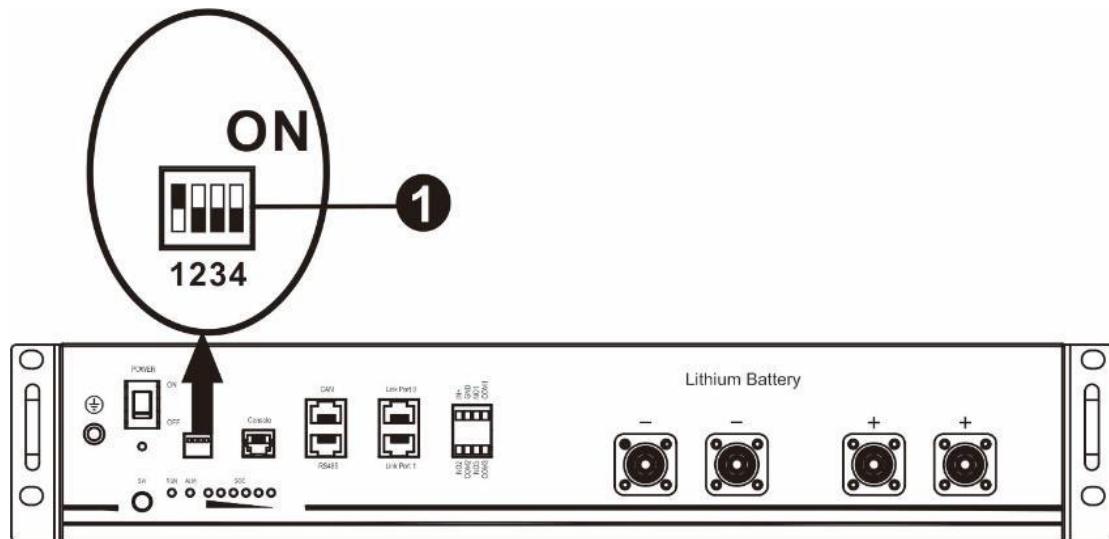


2). Process of install

Step 1. Use the RS485 cable to connect inverter and Lithium battery as Fig 1.

Step 2. Switch on Lithium battery.

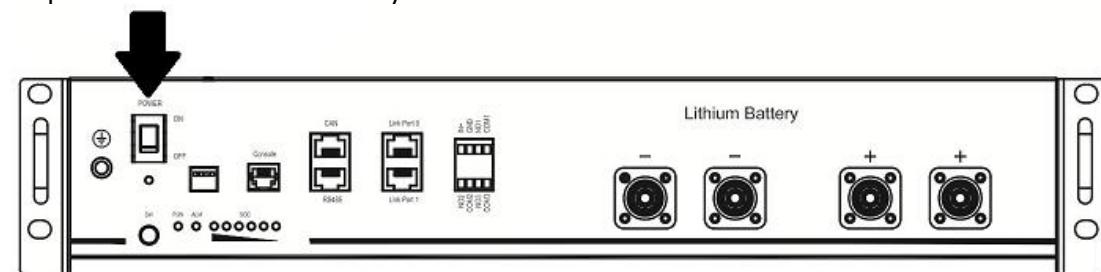

Step 3. Press more than three seconds to start Lithium battery, power output ready.

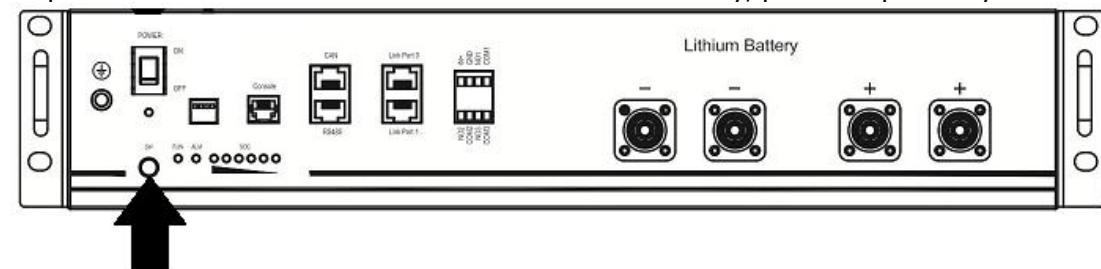

Step 4. Turn on the inverter.

Step 5. Be sure to select battery type as "Li2" in LCD program 5.

If communication between the inverter and battery is successful, the battery icon  on LCD display will light

## Setting for lithium battery without communication

This suggestion is used for lithium battery application and avoid lithium battery BMS protection without communication, please finish the setting as follow:

1. Before starting setting, you must get the battery BMS specification:

- A. Max charging voltage
- B. Max charging current
- C. Discharging protection voltage

3. Set battery type as "LIB"

05	Battery type	AGM (default) 	Flooded 
		<b>User-Defined</b> 	If "User-Defined" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 26, 27 and 29.
		Lithium battery without communication 	If "LIB" is selected, the battery default value is fit for lithium battery without communication battery charge voltage and low DC cut-off voltage can be set up in program 26,27 and 29.

3. Set C.V voltage as Max charging voltage of BMS-0.5V.

26	Bulk charging voltage (C.V voltage)	If self-defined is selected in program 5, this program can be set up. But the setting value must be more than or equal the value of program 27. Increment of each click is 0.1V. 24V models: Default 28.2V, setting range is from 24.0V to 30.0V , 48V models: Default 56.4V, setting range is from 48.0V to 62.0V.
----	-------------------------------------	---

4. Set floating charging voltage as C.V voltage.

27	Floating charging voltage	If self-defined is selected in program 5, this program can be set up. 24V models default setting: 27.0V Setting range is from 24.0V to the value of program 26 48V models default setting: 54.0V Setting range is from 48.0V to the value of program 26
----	---------------------------	---

5. Set Low DC cut-off voltage  $\geq$ discharging protection voltage of BMS+2V.

29	Low DC cut-off voltage	If self-defined is selected in program 5, this program can be set up. The setting value must be less than the value of program12. Increment of each click is 0.1V.Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected. 24V models default setting: 21.0V Setting range is from 20.0V to 27.0V 48V models default setting: 42.0V Setting range is from 40.0V to 54.0V
----	------------------------	---

6. Set Max charging current which must be less than the Max charging current of BMS.

02	Maximum charging current: To configure total charging current for solar and utility chargers. (Max. charging current = utility charging current + solar charging current)	60A (default) 	If selected, acceptable charging current range will be within 1- Max. charging current of SPEC, but it shouldn't be less than the AC charging current (program 11)
----	--	--	--

7. Setting voltage point back to utility source when selecting "SBU priority" or "Solar first" in program 01.The setting value must be  $\geq$ Low DC cut-off voltage+1V, or else the inverter will have a warning as battery voltage low.

12	Setting voltage point back to utility source when selecting "SBU priority" or "Solar first" in program 01.	<b>48V models:</b> 46V (default) Setting range is from 44.0V to 57.2V for 48v model, but the max setting value must be less than the value of program13.
		<b>24V models:</b> 23V (default) Setting range is from 22.0V to 28.6V for 24v model, but The max setting value must be less than the value of program13.



Remark:

- 1.you'd better to finish setting without turn on the inverter(just let the LCD show, no output);
- 2.when you finish setting, please restart the inverter.

## Fault Reference Code


Fault Code	Fault Event	Icon on
01	Over temperature of inverter module	 01 <small>ERROR</small>
02	Over temperature of DCDC module	 02 <small>ERROR</small>
03	Battery voltage is too high	 03 <small>ERROR</small>
04	Over temperature of PV module	 04 <small>ERROR</small>
05	Output short circuited.	 05 <small>ERROR</small>
06	Output voltage is too high.	 06 <small>ERROR</small>
07	Overload time out	 07 <small>ERROR</small>
08	Bus voltage is too high	 08 <small>ERROR</small>
09	Bus soft start failed	 09 <small>ERROR</small>
10	PV over current	 10 <small>ERROR</small>
11	PV over voltage	 11 <small>ERROR</small>
12	DCDC over current	 12 <small>ERROR</small>
13	Over current or surge	 13 <small>ERROR</small>
14	Bus voltage is too low	 14 <small>ERROR</small>
15	Inverter failed (Self-checking)	 15 <small>ERROR</small>
18	Op current offset is too high	 18 <small>ERROR</small>
19	Inverter current offset is too high	 19 <small>ERROR</small>
20	DC/DC current offset is too high	 20 <small>ERROR</small>
21	PV current offset is too high	 21 <small>ERROR</small>
22	Output voltage is too low	 22 <small>ERROR</small>
23	Inverter negative power	 23 <small>ERROR</small>

## Warning Indicator

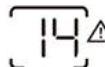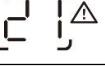Warning Code	Warning Event	Audible Alarm	Icon flashing
02	Temperature is too High	Beep three times every second	
04	Low battery	Beep once every second	
07	Overload	Beep once every 0.5 second	
10	Output power derating	Beep twice every 3 seconds	
14	Fan blocked	None	
15	PV energy is low	Beep twice every 3 seconds	
19	Lithium Battery communication is failed	Beep once every 0.5 second	
21	Lithium Battery over current	None	
Eq	Battery equalization	None	
bp	Battery is not connected	None	

# SPECIFICATIONS

**Table 1 Line Mode Specifications**

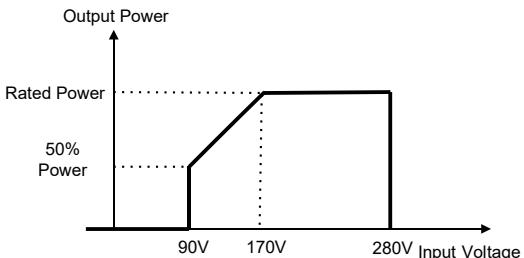INVERTER MODEL	1.5KVA	2.5KVA	3.5KVA	5.5KVA	6.2KVA
<b>Input Voltage Waveform</b>	Sinusoidal (utility or generator)				
<b>Nominal Input Voltage</b>	230Vac				
<b>Low Loss Voltage</b>	170Vac±7V (UPS) 90Vac±7V (Appliances)				
<b>Low Loss Return Voltage</b>	180Vac±7V (UPS); 100Vac±7V (Appliances)				
<b>High Loss Voltage</b>	280Vac±7V				
<b>High Loss Return Voltage</b>	270Vac±7V				
<b>Max AC Input Voltage</b>	300Vac				
<b>Nominal Input Frequency</b>	50Hz / 60Hz (Auto detection)				
<b>Low Loss Frequency</b>	40±1Hz				
<b>Low Loss Return Frequency</b>	42±1Hz				
<b>High Loss Frequency</b>	65±1Hz				
<b>High Loss Return Frequency</b>	63±1Hz				
<b>Output Short Circuit Protection</b>	Battery mode: Electronic Circuits				
<b>Efficiency (Line Mode)</b>	>95% ( Rated R load, battery full charged )				
<b>Transfer Time</b>	10ms typical (UPS); 20ms typical (Appliances)				
<b>Output power derating:</b> When AC input voltage drops to 95V or 170V depending on models, the output power will be derated.					

**Table 2 Inverter Mode Specifications**

<b>INVERTER MODEL</b>	<b>1.5KVA</b>	<b>2.5KVA</b>	<b>3.5KVA</b>	<b>5.5KVA</b>	<b>6.2KVA</b>
<b>Rated Output Power</b>	1.5KVA 1.5KW	2.5KVA 2.5KW	3.5KVA 3.5KW	5.5KVA 5.5KW	6.2KVA 6.2KW
<b>Output Voltage Waveform</b>	Pure Sine Wave				
<b>Output Voltage Regulation</b>	230Vac±5%				
<b>Output Frequency</b>	50Hz or 60Hz				
<b>Peak Efficiency</b>	94%				
<b>Surge Capacity</b>	2* rated power for 5 seconds				
<b>Nominal DC Input Voltage</b>	24Vdc		48Vdc		
<b>Cold Start Voltage</b>	23.0Vdc		46.0Vdc		
<b>Low DC Warning Voltage</b> Just for AGM and Flooded @ load < 20% @ 20% ≤ load < 50% @ load ≥ 50%	22.0Vdc 21.4Vdc 20.2Vdc		44.0Vdc 42.8Vdc 40.4Vdc		
<b>Low DC Warning Return Voltage</b> Just for AGM and Flooded @ load < 20% @ 20% ≤ load < 50% @ load ≥ 50%	23.0Vdc 22.4Vdc 21.2Vdc		46.0Vdc 44.8Vdc 42.4Vdc		
<b>Low DC Cut-off Voltage</b> Just for AGM and Flooded @ load < 20% @ 20% ≤ load < 50% @ load ≥ 50%	21.0Vdc 20.4Vdc 19.2Vdc		42.0Vdc 40.8Vdc 38.4Vdc		

**Table 3 Charge Mode Specifications**

Utility Charging Mode										
INVERTER MODEL	1.5KVA	2.5KVA	3.5KVA	5.5KVA	6.2KVA					
<b>Max Charging Current (PV+AC) (@ VI/P=230Vac)</b>	60Amp	100Amp	100Amp	100Amp	120Amp					
<b>Max Charging Current (AC) (@ VI/P=230Vac)</b>	60Amp	80Amp								
<b>Bulk Charging Voltage</b>	<b>Flooded Battery</b>	29.2Vdc		58.4Vdc						
	<b>AGM / Gel Battery</b>	28.2Vdc		56.4Vdc						
<b>Floating Charging Voltage</b>	27Vdc		54Vdc							
<b>Overcharge Protection</b>	32Vdc		63Vdc							
<b>Charging Algorithm</b>	3-Step									
<b>Charging Curve</b>	<p>The diagram illustrates the three-step charging process. The vertical axis on the left represents 'Battery Voltage, per cell' with markers at 2.25Vdc and 2.43Vdc (2.35Vdc). The vertical axis on the right represents 'Charging Current, %' with markers at 50% and 100%. The horizontal axis represents 'Time'. The process starts at a constant current (T0) in the 'Bulk (Constant Current)' phase, where the voltage rises from 2.25Vdc to 2.43Vdc. This is followed by the 'Absorption (Constant Voltage)' phase, where the current decreases as the voltage remains constant at 2.43Vdc. Finally, the 'Maintenance (Floating)' phase begins at T1, where the current drops to 50% of its peak value, and the voltage remains constant at 2.43Vdc.</p>									
<b>Solar Input</b>										
INVERTER MODEL	1.5KVA	2.5KVA	3.5KVA	5.5KVA	6.2KVA					
<b>Rated Power</b>	2000W	3000W	4000W	5500W	6500W					
<b>Max. PV Array Open Circuit Voltage</b>	500Vdc									
<b>PV Array MPPT Voltage Range</b>	60Vdc~500Vdc									
<b>Max. Input Current</b>	15A	15A	15A	18A	27A					
<b>Max. Charging Current(PV)</b>	60A	100A	100A	100A	120A					

**Table 4 General Specifications**

INVERTER MODEL	1.5KVA	2.5KVA	3.5KVA	5.5KVA	6.2KVA
<b>Operating Temperature Range</b>	-10°C to 55°C				
<b>Storage temperature</b>	-15°C~ 60°C				
<b>Humidity</b>	5% to 95% Relative Humidity (Non-condensing)				
<b>Dimension(D*W*H), mm</b>	358x295x105			438x295x105	
<b>Net Weight, kg</b>	5.8	6.0	6.2	8.2	8.7

# TROUBLE SHOOTING

Problem	LCD/LED/Buzzer	Explanation / Possible cause	What to do
Unit shuts down automatically during startup process.	LCD/LEDs and buzzer will be active for 3 seconds and then complete off.	The battery voltage is too low	1. Re-charge battery. 2. Replace battery.
No response after power on.	No indication.	1. The battery voltage is far too low. 2. Battery polarity is connected reversed.	1. Check if batteries and the wiring are connected well. 2. Re-charge battery. 3. Replace battery.
Mains exist but the unit works in battery mode.	Input voltage is displayed as 0 on the LCD and green LED is flashing.	Input protector is tripped	Check if AC breaker is tripped and AC wiring is connected well.
	Green LED is flashing.	Insufficient quality of AC power. (Shore or Generator)	1. Check if AC wires are too thin and/or too long. 2. Check if generator (if applied) is working well or if input voltage range setting is correct. (UPS→Appliance)
	Green LED is flashing.	Set "Solar First" as the priority of output source.	Change output source priority to Utility first.
When the unit is turned on, internal relay is switched on and off repeatedly.	LCD display and LEDs are flashing	Battery is disconnected.	Check if battery wires are connected well.
Buzzer beeps continuously and red LED is on.	Fault code 07	Overload error. The inverter is overload 110% and time is up.	Reduce the connected load by switching off some equipment.
	Fault code 05	Output short circuited.	Check if wiring is connected well and remove abnormal load.
	Fault code 02	Internal temperature of inverter component is over 100°C.	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
	Fault code 03	Battery is over-charged.	Return to repair center.
		The battery voltage is too high.	Check if spec and quantity of batteries are meet requirements.
	Fault code 06/22	Output abnormal (Inverter voltage below than 190Vac or is higher than 260Vac)	1. Reduce the connected load. 2. Return to repair center
	Fault code 08/09/15	Internal components failed.	Return to repair center.
	Fault code 13	Over current or surge.	Restart the unit, if the error happens again, please return to repair center.
	Fault code 14	Bus voltage is too low.	
	Another fault code		If the wires is connected well, please return to repair center.